

ŁAPKI DO PROWADNIC - TYP H/H

Oznaczenie	Pasujące przewadnice	Φ mm	A mm	B mm	C mm	D mm	E mm	F mm	G mm	H mm
Tolerancje			±1.3	±1.3		±1	±1	±0.5	±1	±1.3
H1	T50	M10	32	22	15	12	5.5	5	11	23
H2	T70	M12	39	26	16	15	7.3	6.6	13	27
H3	T89	M14	45	29	16	18.5	9.5	8	13	34
	T90									

RYSUNEK TECHNICZNY

